


Quick Start Guide

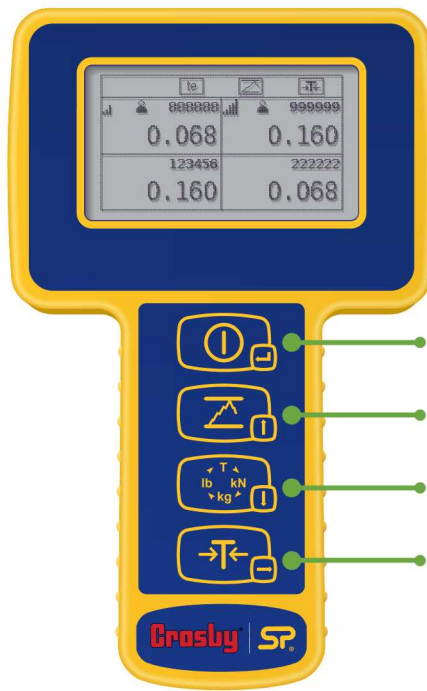

-  Power On/Off
-  Peak Hold On/Off / Reset
-  Weight Units
*Tonne > Kilonewtons
> Kilogrammes > Pounds*
-  Tare

AVAILABLE KEYS

BACKLIGHT ON



PAIRING TO A LOAD CELL

(If purchased separately)



TO END PAIRING



INDIVIDUAL > SUM TOTAL



If more than one load cell is being used, use the keys to switch from individual to total.

CONFIGURATION MENU



SCROLL UP



SCROLL DOWN



ENTER

FULL SW-HHP MANUAL DOWNLOAD



SW-HHP

v1.00
Part No:
SU6060